



To replace flow meter:

Make note in cpd. Press <F12> and enter note “replacing flow meter”

Turn off power on compressor. On/off switch on back near output tubing.

Remove tubing on old flow meter. Leave ½” fitting on flow meter. Only remove ¼” fittings and filter.

Unplug all connections on flow meter and black box. Wrap cables, flow meter and black box and set aside.

Install new flow meter. Note flow direction on bottom of flow meter. Connect tubing with filter to “inlet” and connect tubing to stack on “outlet”.

Plug in cable to flow meter.

Plug cable into comport #11 of back of Edgeport expansion board.

Press “stop cpd” icon on desktop and select “restart”.

Turn on compressor.

Open flowmeter menu <enter> <f>

Turn valve at base of stack until flow is about 12 lpm. Email me so I can check data.

